


Code:

FBSWPVD

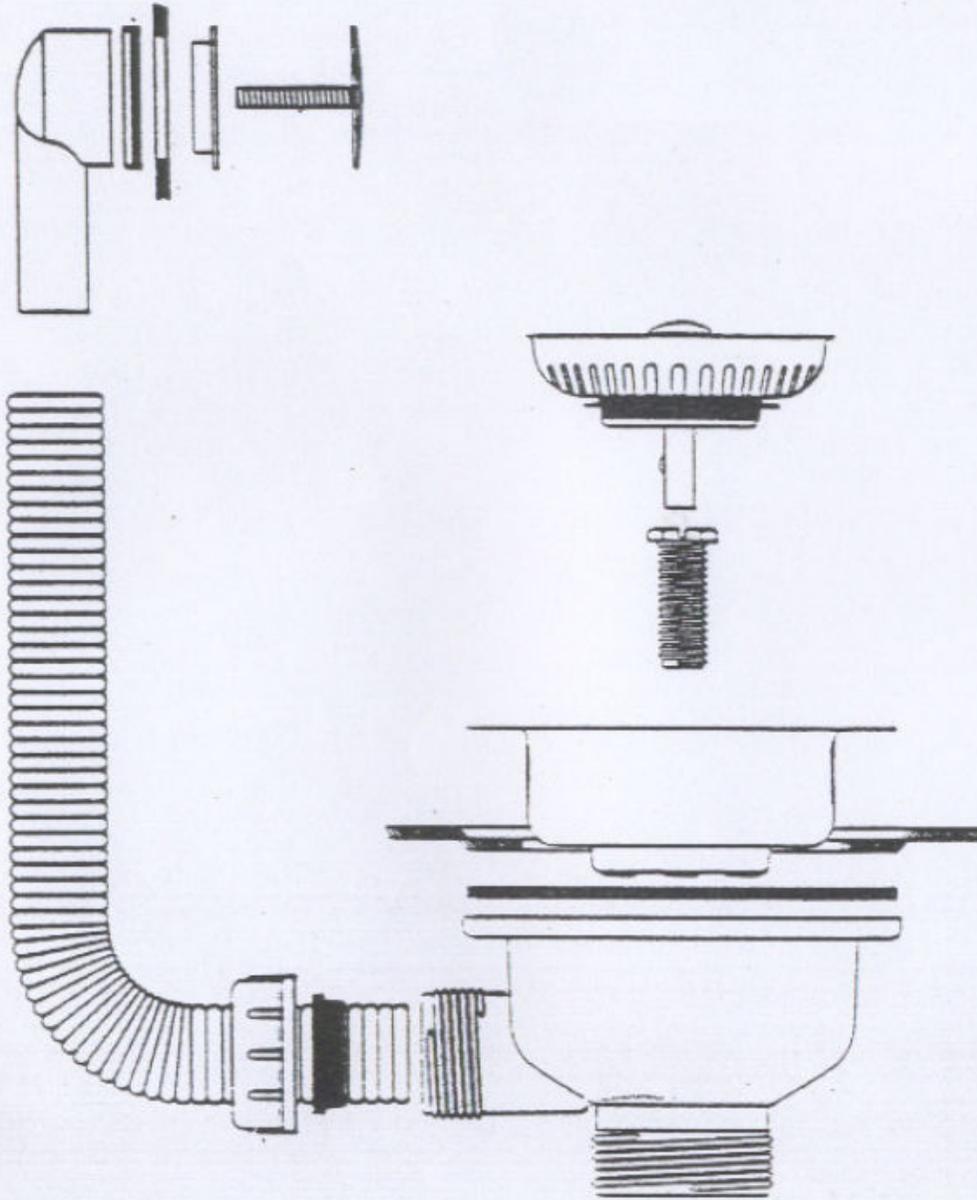

**IT IS RECOMMENDED THAT
SILICONE BE APPLIED
UNDER THE FLANGE
BEFORE INSTALLATION.**



DRAWN BY	SCAN	REVISED	FILENAME
		SCALE	FBSWPVD.VSD
		1: 1	DATE
			01/04/2005